




Coca-Cola - UniVendor-2, Vec5.2 Programming Mode (Models 511 & 601)

To enter service mode, open the outer door and inner door.

The **mode switch** will be indicated by: [M]
 The **selection buttons** will be indicated by: [1], [2], [3], Etc.
 The **reset button** will be indicated by: [R]

Selection Button #1 = Home (Exit, Cancel)
Selection Button #2 = Advance (Next, Increase)
Selection Button #3 = Back Up (Reverse, Previous, Decrease)
Selection Button #4 = Enter (Select, Save)

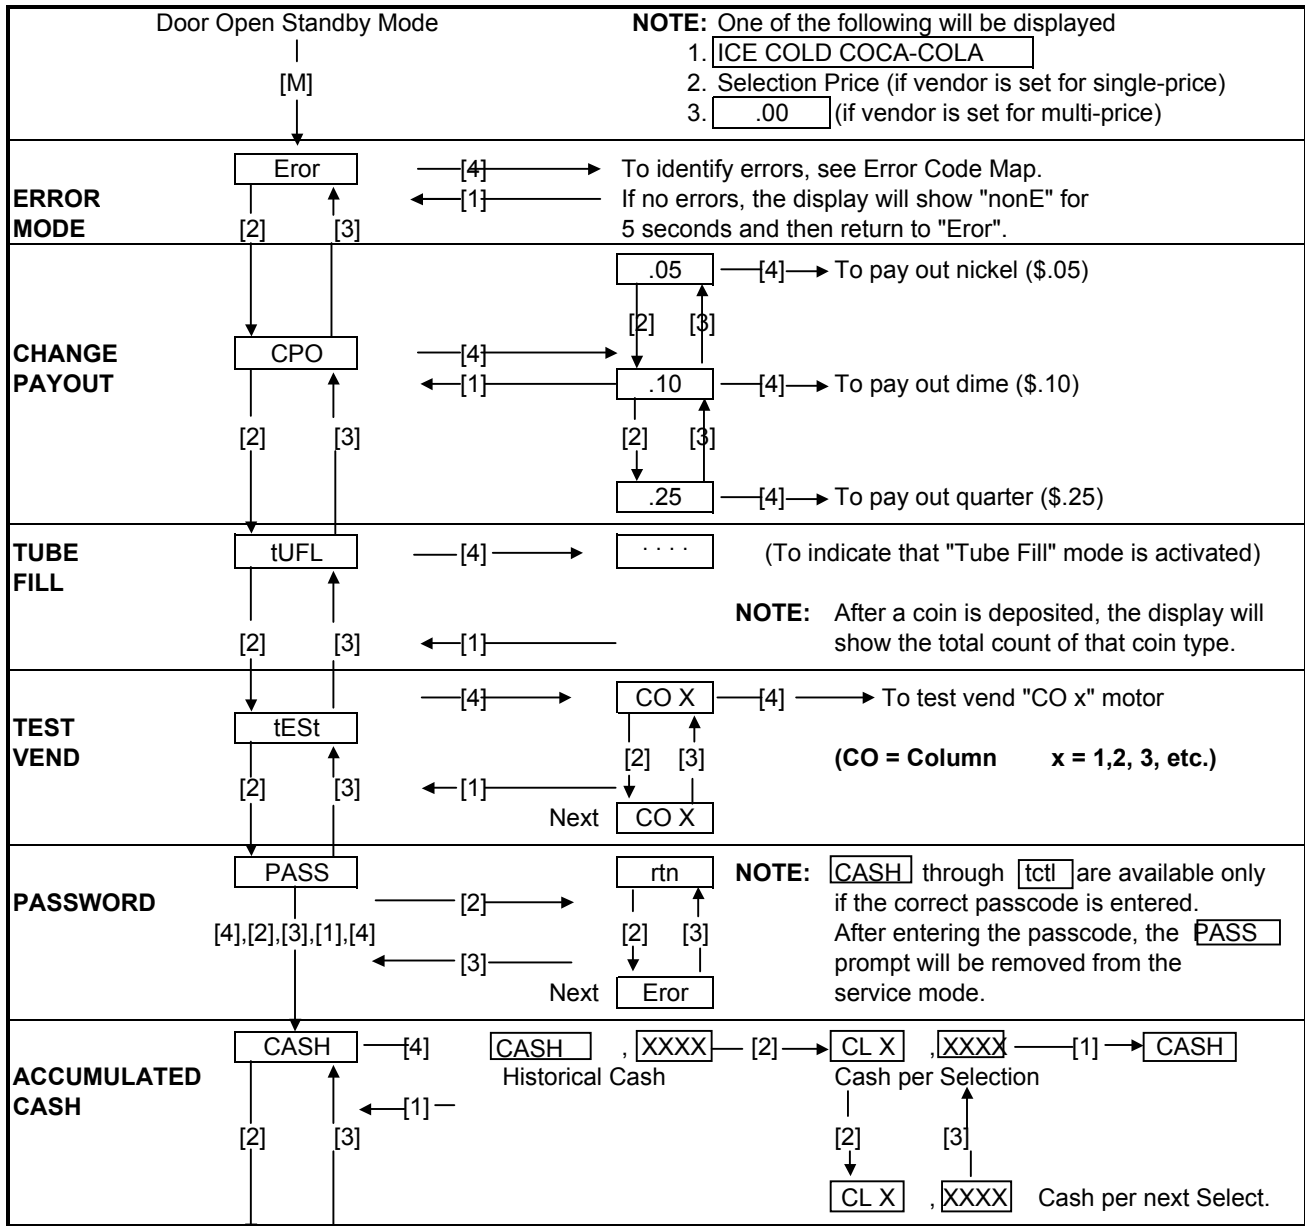



Coca-Cola - UniVendor-2, Vec5.2 Programming Mode (Models 511 & 601)

